
Thank you for your purchase! Please read these instructions carefully before use. Please keep this manual sheet for future reference.

IMPORTANT/WARNING

- -Please remove batteries when the clock is not in use for an extended period to prevent battery leakage.
- -Do not expose this item to fire, water, or moisture.
- -Alkaline batteries have a longer lifespan compared to manganese batteries.

When to replace batteries

- When batteies are about to deplete, you will see 💢 on the LCD display.
- Please replace the batteries with new ones as soon as possible.
- If the alarm sound volume becomes low or the vibration weakens, it may be time to replace the batteries.
- Even if the LCD is still functioning, the batteries may be too weak for optimal performance

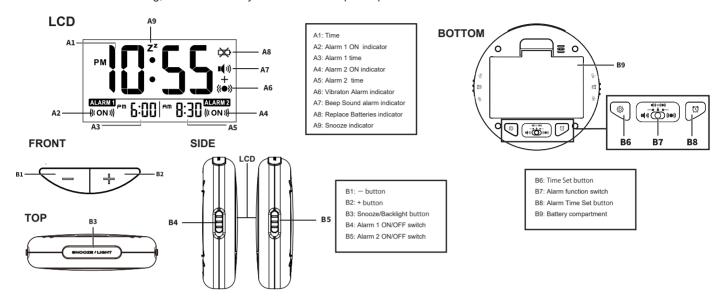

How to start

Remove the battery compartment (B9) and insert the 4 batteries.

How to test alarm

- Press and hold the Snooze/Backlight button (B3) for 3 seconds.

Setting the correct time

- (1) Press and hold the Time Set button (B6) until "12" Hr starts flashing. Use either the button (B1) or the + button (B2) to select between the 12-hour or 24-hour format.
- (2) Press the Time Set button (B6), and the hour display will begin to flash. Use either the the button (B1) or the + button (B2) to adjust the hour. (To advance more quickly, press and hold the the button (B1) or the + button (B2))
- (3) Press the Time Set button (B6), and the minute display will begin to flash. Use either the the button (B1) or the + button (B2) to set the correct minute.
- (4) Press the Time Set button (B6) to confirm and complete the setting. Ensure that you have set the correct AM or PM.

How to set alarm time

- (1) To set Alarm 1 (A3), press and hold the Alarm time set button (B8) until the hour starts flashing. Use eitherthe button (B1) or the + button (B2) to adjust the desired hour.
- (2) Press the Alarm Set button (B8) to move to setting the minute for Alarm 1 (A3), which will begin flashing. Use either the button (B1) or the + button (B2) to set the desired minute.
- (3) To set Alarm 2 (A5), press the Alarm Set button (B8) again, and the hour for Alarm 2 (A5) will start flashing. Use either the button (B1) or the + button (B2) to set the desired hour.
- (4) Press the Alarm Set button (B8) once more, and the minute for Alarm 2 (A5) will start flashing. Use eitherthe button (B1) or the + button (B2) to set the desired minute.

How to switch alarm type

- (1) Set the Alarm function switch (B7) to the right for vibration only.
- (2) Set the Alarm function switch(B7) to the middle for vibration and sound
- (3) Set the Alarm function switch (B7) to the left for sound only.

How to enable/disable alarms

- (1) To enable Alarm 1, switch the Alarm 1 ON/OFF switch (B4) to the "ON" position. The Alarm 1 ON indicator (A2) will appear.
- (2) To enable Alarm 2, switch the Alarm 2 ON/OFF switch (B5) to the "ON" position. The Alarm 2 ON indicator (A4) will appear.
- ■Even if you set the alarm time, the alarm will not activate if the Alarm ON/OFF switches (B4 and B5) are not set to "ON."
- When you are not using the alarm function, set the Alarm ON/OFF switches (B4 and B5) to "OFF." The Alarm ON indicators (A2 and A4) will disappear.

How to stop alarms

The alarm will automatically stop after 2 minutes and will activate again the next day at the same time. To turn off the alarm while it is sounding, press either the Time Set button (B6) or the Alarm Time Set button (B8). The alarm will go off again the next day at the same time.

Snooze functior

(1) While the alarm is sounding, press the Snooze/Backlight button (B3) to enable snooze mode. The alarm will sound again 5 minutes later. You may repeat this cycle up to 7 times. While in snooze mode, the Snooze indicator (A9) will be on. To deactivate the snooze function while in snooze mode, press the Snooze/Backlight button (B3) twice or one of the buttons on the bottom (B6 or B8).

Others

Press the Snooze/Backlight button (B3) to view the LCD display in the dark.



Vibration and sound

I(1)) + {(•)}

Vibration